



EXISTING BACKPLANE TERMINAL STRIPS IN ENVIRON[®] RACK

TERMINAL "TB5"

- 1 - 24 NO CONNECTION
- 25 - 28 NO CONNECTION
- 29 DATA + (DMX IN)
- 30 DATA - (DMX IN)
- 31 NO CONNECTION
- 32 DMX SHIELD (COMMON)

TERMINAL "TB8"


- 33 - 60 NO CONNECTION
- 61 DATA + (DMX THRU)
- 62 DATA - (DMX THRU)
- 63 NO CONNECTION
- 64 NO CONNECTION

JS-ENVY JUMPER & SWITCH SETTINGS

DIP SWITCH SETTINGS "SW4"

- S1 - DIMMER TEST.. ON - ACTIVATE TEST MODE
- S2 - CURVES OFF - DIRECT DRIVE
- ON - NON-DIM


DMX ADDRESS SELECT

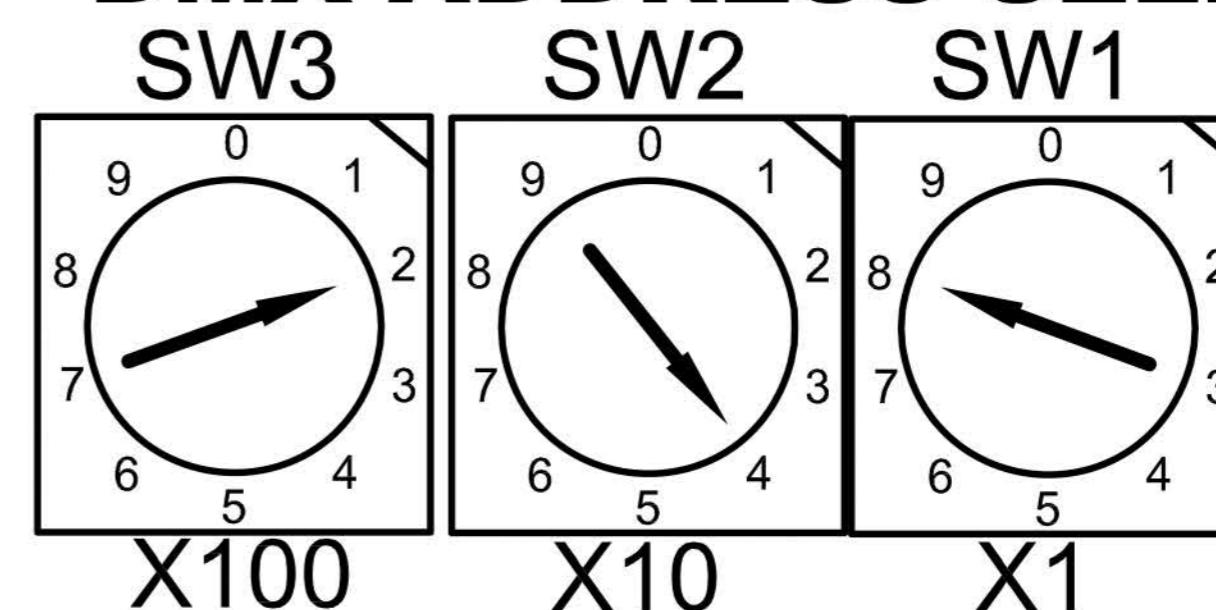

PWR LED will flash slowly when in Test Mode.

EXAMPLE: DMX ADDRESS "248"

DMX512 TERMINATION "JP1"

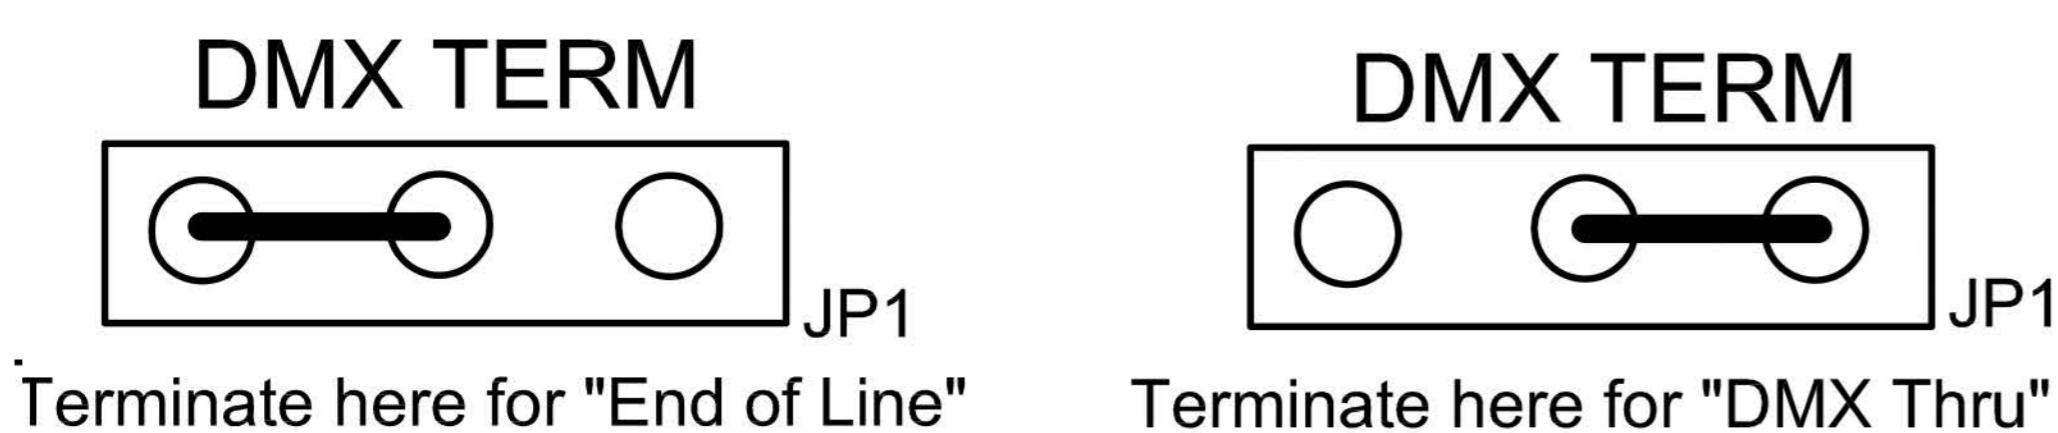

RACK CONFIGURATION "JP2"

*Use needle nose pliers to move the midge jumper to desired location.

